

---

---

**Bingo - #4051**

---

---

**USER'S GUIDE**

  
**Enabling Devices**

50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

---

**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---

A great family game where kids are actively involved in learning while having tons of fun in this number recognition game. Just attach your capability switch and the caller can push their switch to have a number pop out of the cage into the tray so that number may be called. Game comes with 21 Bingo cards, 75 number balls, 200 Bingo markers and a master board. Cage Size: 11"L x 13"W x 8½"H. Requires Capability Switch and 4 AA Batteries.

### **Operation:**

1. Bingo requires four AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn the unit to face the black battery compartments. Carefully remove the small screws from the battery compartment covers using a Phillips head screwdriver, and slide the covers off. Observing proper (+) & (-) battery polarity, install two AA size batteries into each of the holders. Replace the battery compartment covers and screws.
3. Connect the Bingo to any external capability switch via the jack, located next to the battery compartments. Bingo is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch plug. If you need to use a 1/4- to 1/8-inch adapter use our No.1170 adapter. If purchased elsewhere, it must be a mono adapter, not stereo.
4. To fill the cage up with the Bingo game pieces, locate the removable cap on the cage. Turn the cap counter-clockwise to remove and lift off cap. Fill cage and replace cap, turning it clockwise to lock in place.
5. Now activate your external capability switch to start the cage rotating. One full revolution of the cage will drop a game piece into the tray.

6. The cage will continue rotating while your switch is actuated. Once you release the switch, the cage will stop rotating.

### **Important Note:**

Do not try rotating the cage by hand; doing so can cause damage to the motor. Only use your switch to rotate the cage.

### **Troubleshooting:**

**Problem:** The cage does not rotate.

**Action #1:** Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

**Action #2:** Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

**Action#3:** Make sure that you have a tight connection between the external switch and the top. There should be no gaps.

**Action#4:** Try your external capability switch with another toy/device to rule out the switch as the source of the problem.

### **Care of the Unit:**

Bingo can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**